

# Clearing Data from your



## Erasing memory in Samsung phones

- Code: **\*2767\*3855#** Full eeprom reset
- Code: **\*2767\*2878#** Custom eeprom reset
- Code: **2767927#** WAP reset



D900, D900i, G600

The above will not clear downloaded media, favourite media or your music list. You must delete these manually

## SAMSUNG E310

- Codes: Use both of following codes:  
**\*2737\*3855#** (erasing all except media)  
**\*2767\*63342#** (erasing media)



## SAMSUNG i900v

- Key combination: Power on the phone.  
Send + End + Soft reset button  
Follow onscreen instruction.  
If keys are not working try build in function
- Build in: Start, Settings, System, Hard reset, Clear memory



## SAMSUNG i300x

- Build in: Hold key 0 and press power button  
Enter the 1234 password in the **Enter password** field.



## SAMSUNG i320

- Build in: Hold key 0 and press power button.  
Enter the 1234 password in the **Enter password** field.



## SAMSUNG i600

- Build in: Hold up arrow and press power button.  
Press 1, type Y.



## SAMSUNG i780

- Key combination: Turn off the device. Press and hold the Call and End buttons. While holding these buttons, press and hold the Power button until the LED flashes red. Release the Power button and continue holding the Call and End buttons. A screen will appear titled [Format Mode]. Press the 'Space' key to confirm the hard reset.

- Build in: An alternate way to perform a hard reset is to tap Start > Settings > System tab > Hard Reset. Then tap the "Hard Reset" button.

