

## Clearing Data from your



- MENU, SETTINGS, MASTER RESET, RESET ALL, CONTINUE, Default security code is 0000

### Check if following cleared:

- Phone book
- Call list
- SMS, MMS
- Pictures
- Ring tones

### Sony Ericsson W810i

- English Language: Menu, W>, ok, W, ok, ok, English
- Erasing Phone Book: Menu, 8, options, advanced, delete all contacts
- Erasing Call List: Menu, call history, more, delete all
- Erasing Messages: Menu, 5, inbox, more, delete all messages, all, yes, repeat step for all messages menu entries
- Erasing media album: Menu, 1, pictures, more, mark all, more, delete, yes, repeat step for all media album menu entries
- Erasing Organiser: Menu, organiser, calendar, more, delete, all, yes, repeat step for tasks, notes( must delete one by one), my applications,
- Erasing applications: Menu, 3, games, more, delete all, yes
- Wallpaper: Menu, Display, Wallpaper, None,
- Master Reset: Menu, settings, master reset, reset all, continue.



### Sony Ericsson W910, W960i

- Master reset: Menu, settings, control panel, other, master reset, reset all, continue, default security code is 0000
- Format memory stick: Menu, settings, control panel, other, format memory stick, format, yes



---

## Sony Ericsson P990i

- Master reset: Menu, settings, control panel, other, master reset, reset all, continue, default security code is 0000
- Format memory stick: Menu, settings, control panel, other, format memory stick, format, yes




---

## Sony Ericsson Jxxx, Z200, Z300

- Master reset: Menu, Settings, Master reset, Reset all, Default security code is 0000
- Delete calls: Menu, Calls, Clear call list
- Delete phonebook: Menu, Phonebook, Add numbers, press C button several times to delete all number.
- Turn off phone using a button!




---

## Sony Ericsson W300i

- English Language: Menu, W>, ok, ok, W, ok, ok, English
- Erasing Phone Book: Menu, 8, options, advanced, default contacts, phone contacts, select.  
Menu, 8, options, advanced, delete all contacts
- Erasing Call List: Menu, call history, more, delete all
- Erasing Messages: Menu, 5, inbox, more, delete all messages, all, yes  
Repeat step for all messages menu entries
- Erasing media album: Menu, 7, pictures, more, mark all, more, delete, yes, open camera, pictures, more, mark all, more, delete, yes, repeat step for all media album menu entries
- Erasing Organiser: Menu, organiser, calendar, more, delete, all, yes, Repeat step for tasks, notes( must delete one by one), my applications,
- Erasing applications: Menu, 3, games, more, delete all, yes
- Change themes: Menu, #, W, themes, walkman, set
- Master Reset: Menu, settings, master reset, reset all, continue.

