

Clearing Data from Your



NOKIA 1100

- English Language: Menu, 6, 3, 1, 2
- Master Reset: Menu, 6, 7
Enter sec. code 12345, OK
- Erasing Phone Book: Menu, 2, 9, 1, 2, press and hold C Menu, 2, 4, 2
- Erasing Call List: Menu, 3, 4, 1
- Erasing Messages: Menu, 01, 10, All read, OK. Repeat for all 'Delete messages' menu entries.
Menu, Messages, Inbox, delete all unread messages.
- Erasing Reminders: Menu, 8, 3, 2



NOKIA 1110i / 1112

- English Language: Menu, >>>, Select, >>>>>, Select, Select, English, OK
- Master Reset: Menu, >>>, Select, <, Select, Enter security code 12345, press OK
- Setting Phone Memory: Menu, >, Select, >>>>, Select, √, Select, √, Select.
- Erasing Phone Book: Menu, >, Select, >>, Select, √, Select, OK, Enter sec. code 12345, OK
- Erasing Call List: Menu, >>, Select, >>>, Select, Select
- Erasing Messages: Menu, Select, <<<<, Select, Select, OK,
Repeat step for all messages menu entries
- Erasing Reminders: Menu, <<<<, Select, >>, Select, √, OK, Yes



NOKIA 1600:

- English Language: Menu, >>>, Select, >>>>>, Select, Select, English, OK
- Master Reset: Menu, >>>, Select, <, Select, Enter security code 12345, press OK
- Setting Phone Memory: Menu, >, Select, >>>>, Select, √, Select, √, Select.
- Erasing Phone Book: Menu, >, Select, >>, Select, √, Select, OK, Enter sec. code 12345, OK
- Erasing Call List: Menu, >>, Select, >>>, Select, Select
- Erasing Messages: Menu, Select, <<<<, Select, Select, OK,
Repeat step for all messages menu entries
- Erasing Reminders: Menu, <<<<, Select, >>, Select, √, OK, Yes



NOKIA 2100:

- English language: 4-3-1-2
- Erasing phone book: Names-Settings-Memory in use-Phone Names-Delete-Delete All
- Erasing call list: 2-4-1
- Erasing messages: 1-9-1
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 2300:

- English language: 6-4-1-2
- Erasing phone book: 2-9-1-2
2-4-2-ok
- Erasing call list: 3-4-1
- Erasing messages: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 2600:

- English language: 4-6-1-2
- Erasing phone book: 2-8-2-2 (to change for phone mem.)
2-3-2
- Erasing call list: 3-4-1
- Erasing messages: 1-9-1
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 2650i

- English language: 4-10-1-1-2
- Erasing phone book: 3-3-2-1
- Erasing call list: 2-4-1
- Erasing messages: 1-1-9-1-ok
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 2760

- Phone without sim card!!!
- Master reset: Menu, Settings, Restore fac. sett., Restore all, continue, Enter security code 12345 (sometimes 2x), OK



NOKIA 3100:

- English language: Menu, 5, 5, 1, 2
- Master Reset: Menu, 5, 7, 10 Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 3, 2, 1, Delete, OK Enter sec. code 12345, OK
- Erasing call list: Menu, 2, 4, 1
- Erasing messages: Menu, 01, 1, 9, 1, Select Menu, 01, 2, 6, Select, OK Repeat step for all messages menu entries
- Erasing gallery: Menu, 7, 1, 1, manually
- Erasing calendar: Menu, 8, Options, Delete all notes, OK
- Erasing applications: Menu, 10, 1, manually delete all apps



NOKIA 3120:

- English language: Menu, 5, 5, 1, 2
- Erasing phone book: Menu, 3, 3, 2, 1, Delete
- Erasing call list: Menu, 2, 4, 1, 1
- Erasing messages: Menu, 01, 1, 9, 1, Select
- Erasing gallery: Menu, 7, 1, manually
- Erasing calendar: Menu, 8, Options, Delete all notes, OK
- Erasing applications: Menu, 10, 1, manually delete all apps



NOKIA 3200:

- English language: 4-8-1-2
- Erasing phone book: 3-4-2-1
- Erasing call list: 2-4-1
- Erasing messages: 1-2-6-1
- Erasing organiser manually
- Erasing applications manually



NOKIA 3210:

- English language: Menu, 4, 2, 1, 2
- Erasing phone book: Menu, 01, 4, 2, OK
Enter security code 12345, press OK
- Erasing call list: Menu, 3, 4, 1
- Erasing messages: Menu, 2, 1, manually



NOKIA 3220:

- English language: Menu, 4,9,1,2
- Master reset Menu, 4, 14 Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 3, 2, Phone, Delete, Yes,
Enter security code 12345, press OK
- Erasing call list: Menu, 2, 4, 1
- Erasing messages: Menu, 01, 11, Select Inbox, Yes
Repeat step for all messages menu entries
- Erasing gallery: Menu, 5, Open Images ,Options, Delete all
Repeat step for all folders menu entries
- Erasing applications: Menu, 8, Games, Select game, Options, Delete, Yes



NOKIA 3310/3330:

- English language: 6, 2, 1, 2
- Master reset 6,4 Enter sec. code 12345, OK
- Erasing phone book: 01, 4, 2
- Erasing call list: 4, 4, Ok
- Erasing messages: Menu, 2,2,select, read, options, erase, yes
Menu, 2,2, select, read, options, erase, yes
- Erasing reminders: Menu, 10, 3, 2



NOKIA 3410:

- English language: Menu, 4,4,1,2
- Master reset: Menu, 4, 8
Enter sec. code 12345, OK
- Erasing messages: Menu, 01, 9, 1, OK
- Repeat step for all messages menu entries
- Erasing call list: Menu, 2, 4, 1
- Erasing phone book: Names, settings, Memory in use, Phone Names, Delete, Delete All OK
Enter security code 12345, press OK
- Erasing reminders: Menu, 6, 3, 2, yes



NOKIA 3510:

- English language: Menu, 6, 3, 1, 2
- Master reset: Menu, 6, 6 Enter sec. code 12345, OK
- Erasing phone book: Menu, 01,4,2,1,erase, Ok,
Enter security code 12345, press OK
- Erasing call list: Menu, 3, 8, 1
- Erasing messages: Menu, 2, 10, select, Ok



NOKIA 3510i:

- English language: Menu, 6,3,1,2
- Master reset: Menu, 6, 7
Enter sec. code 12345, OK
- Erasing phone book: Menu, 01,4,2,1,Delete, OK
Security code: 12345
- Erasing messages: Menu, 2, 1, 8, 1, select, OK
Repeat step for all messages menu entries
- Erasing call list: Menu, 3, 4, 1
- Erase gallery images: Menu, 7, check gallery pictures and erase not standard pictures
- Erasing applications: Menu, Games, Select game, and erase not standard games
- Erasing organiser: Menu, 9, 2, press options, day notes and clear all notes



NOKIA 5110:

- English language: Menu, 4,2,1,2
- Master reset: Menu, 4, 4 Enter sec. code 12345, OK
- Erasing phone book: Menu, 1,4,2 select, ok
Enter security code 12345, press OK
- Erasing call list: Menu, 3, 4, 1
- Erasing message: Menu, 2,1,select, read, options, erase, yes
Menu, 2, 2, select, read, options, erase, yes



NOKIA 5140i:

- English language: Menu, 4,10,01,1,2
- Master reset: Menu, 4, 14
Enter sec. code 12345, OK
- Erasing phone book: Menu, 2,10,1,YES
Enter security code 12345, press OK
- Erasing call list: Menu, 3,5,1
- Erasing messages: Menu, 1,10,1 yes
Repeat step for all messages menu entries
- Erasing gallery
Gallery-Images-Options-Delete all
Gallery-Video Clips-Options-Delete all
Gallery-Recordings-Options-Delete all
Gallery-Receives. Files -Options-Delete all
- Erasing organiser: Menu, 6, 3, 3 press options and del all notes, yes
Menu, 6, 3, 4 press options and del all notes, yes



NOKIA 6020:

- English language: Menu, 4,8,1,2
- Master reset: Menu, 4, 13
Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 7, 1, 2
Menu, 3, 3, 2, 1, Yes
Enter security code 12345, press Ok
- Erasing call list: Menu, 2,4,1
- Erasing messages: Menu, 01,11,Select Inbox, yes
Repeat step for all messages menu entries
- Erasing gallery
Menu, 5,Open images, options, delete all
Menu, 5,OpenVideo clips, options, delete all
Menu, 5,Open Themes, options, delete all
Menu, 5,Open Graphics, options, delete all
Menu, 5,Open tones, options, delete all



- Erasing organiser: Menu, 7, check to do list and notes and erase all the information
 - Erasing applications: Menu, 8, 1,01, and erase all not standard games
-

NOKIA 6021:

- English language: Menu, 4, 8, 01, 2
- Master reset: Menu, 4, 13
Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 7, 1, 2
Menu, 3, 3, 2, 1, yes
Enter security code 12345, press Ok
- Erasing call list: Menu, 2, 4, 1
- Erasing messages: Menu, 01, 11, Select Inbox, yes
Repeat step for all folders menu entries
- Erasing gallery: Menu, 5, Open Recordings, options, delete all
Menu, 5, Open Tones, options, delete all
Menu, 5, Open Themes, options, delete all
Menu, 5, Open Graphics, options, delete all
Menu, 5, Open Images, options, delete all
- Erasing organiser: Menu, organiser, check calendar, to do list and notes and erase all the information
- Erasing applications: Menu, applications and erase all not standard games



NOKIA 6030:

- English language: Menu, 4, 8, 01, 2
- Master reset: Menu, 4, 13
Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 6, 1, yes
Enter security code 12345, press Ok
- Erasing call list: Menu, 2, 4, 1, 1
- Erasing messages: Menu, 01, 9, 1
- Erasing gallery: Menu, 5, check gallery pictures and erase not standard pictures
- Erasing applications: Menu, 8, 1, and erase all not standard games
- Erasing organiser: Menu, 7, 2 options and delete all notes



NOKIA 6070:

- English language: Menu, Settings, Phone, Phone language, English
- Master reset: Menu, Settings, Restore factory sett.,
- Enter sec. code 12345, OK
- Erasing phone book: Menu, Contacts, Settings, Memory in use, Phone Delete all contacts, Enter security code 12345, Ok
- Erasing call list: Menu, Log, Clear log lists, All call lists
- Erasing messages: Menu, Delete Messages, Inbox Repeat step for all messages menu entries
- Erasing gallery: Menu, Gallery, Images, Options, Delete all, Yes, Repeat step for all folders entries
- Erasing organiser: Menu, Calendar, Options, Delete all notes, Check to do list and notes and erase all the information
- Erasing applications: Menu, Applications, Games, Options, Delete all, Collections, Options, Delete all,



NOKIA 6100:

- English language: Menu, 5, 4, 1, 2
- Master Reset: Menu, 5, 9, Enter sec. code 12345, OK
- Erasing phone book: Menu, 3, 4, 2, 1 press delete and yes Enter security code 12345, press Ok
- Erasing call list: Menu, 2, 4, 1
- Erasing messages: Menu 01, 1, 9, 1 press select and ok
- Gallery: Menu, 5, view folders, images, and erase not standard pictures
- Erasing organiser: Menu, 8, 2, Options, Delete, OK
- Erasing applications: Menu 10, 1, check applications and erase not standard applications



NOKIA 6101:

- English language: Menu, settings, phone, phone language, english
- Master reset: Menu, settings, restore factory settings
Enter sec. code 12345, OK
- Erasing phone book: Menu, contacts, settings, memory in use, phone,
back, delete all contacts, from phone mem, yes,
Enter sec. code 12345, OK
- Erasing call list: Menu, call register, delete recent calls
- Erasing messages: Menu, messages, delete messages, inbox, yes
Repeat step for outbox, sent items, saved text msgs,
Saved multimedia
- Erasing gallery Menu, gallery, images, open, options, delete all
Repeat step for all folders menu entries
- Erasing organiser Menu, organiser, calendar, options, delete all notes
Repeat step for To-do list and notes
- Erasing application Menu, applications, games, erase all not standard
games



NOKIA 6111:

- English language: Menu, 4, 9, 01, 1
- Master reset: Menu, 4, 13, Enter sec. code 12345, OK
- Erasing phone book: Menu, 2, 10, 1
- Erasing call list: Menu, 3, 6, 1
- Erasing messages: Menu, 01, 13, 3
- Erasing delivery reports: Menu, 01, delivery reports, options, delete all
- Erasing gallery: Menu, 5, open images, options, mark all, options,
delete marked,
Repeat step for all messages menu entries
- Erasing organiser Menu, 8, 3, options, delete all notes,
Menu, 8, 4, options, delete all notes
- Erasing applications Menu, 9, 01, check and erase all not standard
games



NOKIA 6131:

- Phone without sim card!!! Remove memory card from phone!!!
- English Language: Menu, Settings, Select, \\\\", Select, Select, Select, English, Select
- Erasing Phone Book: Menu, Contacts, Select, \\\\", Select, Select, Phone, Back, Delete all contacts, Select, Select, Yes, Sec. code 12345, OK
- Erasing Call List: Menu, Log, \\\\", Select, Select
- Erasing Messages: Menu, Messaging, Select, \\\\", Select, \ Select, (If you have information: Keep unread messages? press NO), Yes,
- Erasing Delivery reports: Menu, Messaging, Select, \\\\", Select, Options, \, Select, Yes
- Erasing Applications: Applications, Select, Options, \, Select, Options, \, Select, Yes, Ok, Open, Options, \, Select, Options, Select, Yes, OK, Back, \, Open, Options, \, Select, Options, \, Select, Yes, OK,
- Erasing Gallery: Gallery, Select, Open, Options, \, Select, Options, \, Select, Yes, Ok, Back, \, Repeat step for all folders menu entries
- Erasing Organiser: Menu, Organiser, Select, \, Options, Delete all notes, Select, Yes, Back, Back, \, Select, Options, \, Select, Yes, Back, \, Select, Options, \, Select, Yes
- Master Reset: Menu, Settings, Select, \, Select, Enter security code 12345, OK



NOKIA 6210:

- Master reset: Menu, 4, 7
- Enter sec. code 12345, OK
- English language: Menu, 4, 4, 1, 2
- Erasing phone book: Names, Options, Mem. in use, Phone names, Erase, Erase all, Phone, Enter sec. code 12345, OK
- Erasing call list: Menu, 2, 4, 1, 1
- Erasing messages: Menu, 01, 7, 1
Repeat step for all messages menu entries
- Erasing organiser: Menu, Calendar, Options, Settings, Auto erase, After 1 month, Set the date (01-01-2050), OK
- Erasing applications: Manual



NOKIA 6230:

- English language: Menu, 4, 8, 01, 2
- Erasing phone book: Menu, 3, 7, 01, 2
Menu 3, 3, 2, 1, delete, yes
Enter sec. code 12345, OK
- Erasing call list: Menu, 2, 4, 1, 1
- Erasing messages: Menu, 01, 1, 9, 1, select, yes
Repeat step for all messages menu entries
- Erasing gallery: Menu, 5, open images, options, delete all,
Repeat step for all menu entries
- Erasing organiser: Menu, 7, 2, options, delete all notes,
Menu, 7, 3, options, delete all notes,
Menu, 7, 4, options, delete all notes



NOKIA 6230i:

- English language: 4-9-1-2
- Erasing phone book: 2-9-1-YES
- Erasing call list: 3-4-1
- Erasing messages: MANUAL
- Erasing gallery: MANUAL
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 6280:

- Phone without sim card!!! Remove memory card from phone!!!
- English Language: Menu, Settings, Select, \\\\/\\\/, Select, Select, Select, English, Select
- Erasing Phone Book: Menu, Contacts, Settings, Memory in use, Phone, Back, Delete all contacts, Select, Yes, Sec. code 12345, OK
- Erasing Call List: Menu, Log, \\\\/\\\/, Select, Select
- Erasing Messages: Menu, Messaging, Select, \\\\/, Select, \\\\/ Select, (If you have information: Keep unread messages? press NO),
- Erasing Delivery reports: Menu, Messaging, Select, \\\\/\\\/\\\/, Select, Options, \\\\/, Select, Yes

If you can't open delivery reports you must insert correct sim card

- Erasing Applications: Applications, Select, Options, \\\\/, Select, Options, Select, Yes, Ok, Open, Options, \\\\/, Select, Options, Select, Yes, OK, Back, \\\\/, Open, Options, \\\\/, Select, Options, Select, Yes, OK,
- Erasing Gallery: Gallery, Select, Open, Options, \\\\/, Select, Options, \\\\/, Select, Yes, Ok, Back, \\\\/, Repeat step for all folders menu entries
- Erasing Organiser: Menu, Organiser, Select, \\\\/, Options, Delete all notes, Select, Yes, Back, Back, \\\\/, Select, Options, \\\\/, Select, Yes, Back, \\\\/, Select, Options, \\\\/, Select, Yes
- Master Reset: Menu, Settings, Select, \\\\/, Select, Enter security code 12345, OK



NOKIA 6288:

- Phone without sim card!!! Remove memory card from phone!!!
- English Language: Menu, Settings, Select, \\\\", Select, Select, Select, English, Select Master Reset: Menu, Settings, Select, \\", Select, Enter security code 12345, OK
- Erasing Phone Book: Menu, contacts, settings, memory in use, phone, back Delete all contacts, select, yes, sec. code 12345, OK
- Erasing Call List: Menu, Log, \\\\", Select, Select
- Erasing Messages: Menu, Messaging, Select, \\", Select, \ Select, (If you have information: Keep unread messages? press NO),
- Erasing Delivery reports: Menu, Messaging, Select, \\\\", Select, Options, \\", Select, Yes
- Erasing Applications: Menu, Applications, Select, Options, \\", Select, Options, Select, Yes, Ok, Open, Options, \\", Select, Options, Select, Yes, OK, Back, \\", Open, Options, \\", Select, Options, Select, Yes, OK,
- Erasing Gallery: Menu, Gallery, Select, Open, Options, \\", Select, Options, \\", Select, Yes, Ok, Back, \\", Repeat step for all menu entries
- Erasing Organiser: Menu, Organiser, Select, \\", Select, Options, Delete all notes, Select, Yes, Back, Back, \\", Select, Options, \\", Select, Yes, Back, \\", Select, Options, \\", Select, Yes



Nokia 6300

- English language: Menu, settings, phone, phone language, english
- Master reset: Menu, settings, restore factory settings Enter sec. code 12345, OK
- Erasing phone book: Menu, contacts, settings, memory in use, phone, back, Delete all contacts, from phone mem, yes, Enter sec. code 12345, OK
- Erasing call list: Menu, call register, delete recent calls
- Erasing messages: Menu, messages, delete messages, inbox, yes Repeat step for outbox, sent items,
- Erasing delivery reports: Menu, 01, delivery reports, options, delete all
- Erasing gallery Menu, gallery, images, open, options, delete all Repeat step for all folders menu entries
- Erasing organiser Menu, organiser, calendar, options, delete all notes Repeat step for To-do list and notes
- Erasing application Menu, applications, games, erase all not standard games



NOKIA 6310:

- English language: 4-4-1-2
- Erasing phone book: manual
- Erasing call list: 2-4-1-1
- Erasing messages: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 6233:

- English language: Menu, settings, phone, language settings, English
- Master reset: Menu, settings, restore factory settings
Enter sec. code 12345, OK
- Erasing phone book: Menu, contacts, settings, memory in use, phone, back, Delete all contacts, from phone mem, yes, Enter sec. code 12345, OK
- Erasing call list: Menu, log, delete recent calls
- Erasing messages: Menu, messages, delete messages, all messages, yes, back, Repeat step for all messages menu entries
- Erasing gallery: Menu, gallery, open images, options mark all, options, delete marked, Repeat step for all folders menu entries
- Erasing organiser: Menu, organiser, calendar, options, delete all notes
Repeat step for To-do list and notes
- Erasing application: Menu, applications, games, erase all not standard games



NOKIA 6234:

- English language: Menu, settings, phone, language settings, English
- Master reset: Menu, settings, restore factory settings
Enter sec. code 12345, OK
- Erasing phone book: Menu, contacts, settings, memory in use, phone, back, Delete all contacts, from phone mem, yes, Enter sec. code 12345, OK
- Erasing call list: Menu, log, delete recent calls
- Erasing messages: Menu, messages, delete messages, all messages, yes, back, Repeat step for all messages menu entries
- Erasing gallery: Menu, my items, open images, options, mark all, options, delete marked, Repeat step for all folders menu entries



- Erasing organiser: Menu, organiser, calendar, options, delete all notes
Repeat step for To-do list and notes
- Erasing application: Menu, applications, games, erase all not standard games

NOKIA 6510:

- English language: 4-4-2
- Erasing phone book: Names-Settings-Memory in use-Phone
Names-Erase-Erase All-Phone-OK
- Erasing call list: 2-4-1
- Erasing messages: 1-1-OK
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 6610:

- English language: 4-3-1-2
- Erasing phone book: Names-Setting-Memory in use-Phone
Delete-Delete all- Phone
- Erasing call list: 2-4-1
- Erasing messages: 01-1-8-1
- Erasing gallery: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 6610i:

- English language: 5-4-1-2
- Erasing phone book: 2-4-1
- Erasing call list: 3-3-2-1
- Erasing messages: manual
- Erasing gallery: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 7110:

- English language: 4-3-1-3
- Erasing phone book: Names-Settings-Memory in use-Phone
Names-Delete-Delete All
- Erasing call list: 2-4-1
- Erasing messages: manual



- Erasing organiser Manual
 - Erasing applications Manual
-

NOKIA 7210:

- English language: 4-3-1-2
- Erasing phone book: Names-Settings-Memory in use
Phone-Delete-Delete all
- Erasing call list: 2-4-1
- Erasing messages: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 7250i:

- English language: 5-4-1-2
- Erasing phone book: 3-3-2-1-OK
- Erasing call list: 3-4-1
- Erasing messages: MANUAL
- Erasing gallery: MANUAL
- Erasing call list: 2-4-1-OK
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 7373

- Phone without sim card!!! Remove memory card from phone!!!
- English Language: Menu, Settings, Select, \\\\", Select, Select, Select, English, Select
- Master Reset: Menu, Settings, Select, \\", Select, Enter security code 12345, OK
- Erasing Phone Book: Menu, contacts, settings, memory in use, phone, back, Delete all contacts, select, yes, sec. code 12345, OK
- Erasing Call List: Menu, Log, \\\\", Select, Select
- Erasing Messages: Menu, Messaging, Select, \\", Select, \\" Select, (If you have information: Keep unread messages? press NO),
- Erasing Delivery reports: Menu, Messaging, Select, \\\\", Select, Options, \\", Select, Yes
- Erasing Applications: Menu, Applications, Select, Options, \\", Select, Options, Select, Yes, Ok, Open, Options, \\", Select, Options, Select, Yes, OK, Back, \\", Open, Options, \\", Select, Options, Select, Yes, OK,
- Erasing Gallery: Menu, Gallery, Select, Open, Options, \\", Select, Options, \\", Select, Yes, Ok, Back, \\", Repeat step for all menu entries



- Erasing Organiser: Menu, Organiser, Select, \/, Select, Options, Delete all notes, Select, Yes, Back, Back, \/, Select, Options, \/, Select, Yes, Back, \/, Select, Options, \/, Select, Yes
-

NOKIA 8310:

- English language: 4-4-2
- Erasing phone book: Names-Settings-Memory in use-Phone Names-Erase-Erase All-Phone-OK
- Erasing call list: 2-4-1
- Erasing messages: 1-7-1-OK
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA 8850:

- English language: 4-5-1-2
- Erasing phone book: manual
- Erasing call list: 2-4-1
- Erasing messages: manual
- Erasing organiser: Manual
- Erasing applications: Manual



NOKIA N95 8GB

- Format mass memory: Menu, tools, utilities, memory, options, format mass memory, yes
- Enter code: *#7370#, lock code 12345 and press ok
- Check life blog

