


Clearing Data from your

HTC

TRIN100, KAIS130, HERM200, PHAR100, ELF0100, ARTE200:

- **Hard reset:** Turn on device, Press and hold the Left SOFT KEY and the Right Soft Key, and at the same time, use the stylus to press the RESET button at the bottom centre part of your device.
- **Reset** Follow the on-screen instructions to reset the phone.

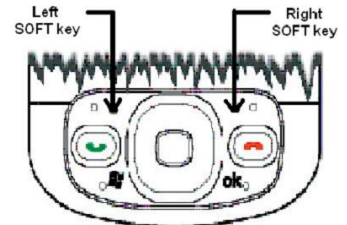

PH10A/PH10B:

- **Full reset:** Turn on device, press and hold the power button, and then use the stylus to press the soft reset button at the same time.



PM10A:

- **Full reset:** Turn on device, press and hold the power button, and then use the stylus to press the soft reset button at the same time.



WIZA200:

- **Hard reset** Turn on your device Press and hold "Comm Manager" and "Voice Command" buttons at the same time; then press "RESET" button. When the screen displays the message "Press Send to restore...", press "Send" button.



PM300:

- **Hard reset** Press and hold the CAMERA and COMM MANAGER buttons, at the same time, use the stylus to press the RESET button at the bottom of your device.



VOX0100:

To reset

- Click Start > Expert > Clear Storage or
1. Click Start > Accessories > Clear Storage or
 1. Click Start > Tools > Clear Storage
 2. Follow the on-screen instructions to reset the phone.
- The phone will restart after it has been reset.



PU10:

- Hard reset


Press and hold both SOFT KEYS shown enclosed by circles in the picture. Keep these keys pressed, and at the same time, use the stylus to lightly press and hold the RESET button on the left side of your device. Press either 0 to restore to factory default.



NIKI100:

- Hard reset

Press and hold the TALK and END buttons, and at the same time, use the stylus to press the RESET button at the left side of device.
Release the stylus, but continue pressing the TALK and END buttons until you see the following message on the screen:
This operation will delete all your personal data.
Press ENTER to restore the manufacturer's defaults, or press any other button to cancel.
Release the TALK and END buttons, and then press ENTER.

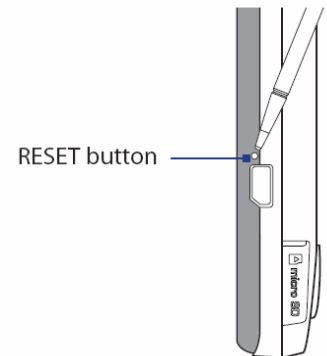

XCA210:

- Hard reset

Press and hold the left SOFT KEY and the right SOFT KEY, and at the same time, use the stylus to press the RESET button at the bottom of your device.
Release the stylus, but continue pressing the two SOFT KEYS until you see the following message on the screen:
"This operation will delete all your personal data, and reset all settings to the manufacturer default settings. Press SEND to restore manufacturer defaults, or press any other button to cancel."
Release the two SOFT KEYS, and then press the button on your device.



DIAM100:

- Hard reset

Pull out the stylus.
With the device turned on, press and hold the VOLUME DOWN and ENTER buttons, then press the RESET button with the stylus tip.
Release the RESET button, but continue pressing the VOLUME DOWN and ENTER buttons until you see this message on the screen:
"This operation will delete all your personal data, and reset all settings to manufacturer default. Press Vol Up to restore manufacturer default, or press other keys to cancel."
Release the VOLUME DOWN and ENTER buttons, then press the VOLUME UP button to perform the hard reset, or press any other button to cancel the reset.



SV10A:

- **Hard reset**

Power Off phone and remove DS/MMC card or blank spacer
Hold down "Camera/Voice Recorder" button adjacent to power button
Power on Phone ... message comes up: "press any key to enter boot loader"

Release the "Camera/Voice Recorder" button

Immediately press and hold down the joystick button

At this point, you're looking at a menu with 1-8 on it, select 8 and the phone should hard-reset.

(If you see a red/green/blue screen, you've got it wrong, and you'll need to remove the battery, replace and start from again!)



ST22D, Spv c500

- **Hard reset**

Press and hold soft1 and soft2 keys.

Press and hold power button for around 1 to 1.5 seconds.

Release power button. Keep hold soft1 and soft2 keys.

Press '0' within the timeout period, which is only several seconds only.

If no instruction is shown on the screen, repeat steps 1 to 3.

