

# CLEARING DOWN PROCEDURE LG

## Clearing all information in:

B2100, C1100, C1150, C1200, C2200, C3100, C3300, C3310, C3320, C3380, F2100, F2300, F2400, F7250, G1610, G5300, G5300i, G5400, G7100, KE260, KE970, KG120, KG130, KG220, KG240, KG275, KG800, L1100, L3100, L342i, L342i, L343i, S5200, T5100, W3000, W5220C, L1100, KP100, KP235, KG375, G7030 (2945##\*#5 select Factory Reset)

Code: **2945##\*#** (select Factory Reset)

---

## Model KU990:

Insert sim card and then 3845##\*990# select Factory Reset

---

**Model KE850:**                      2945##\*#, press factory reset and factory reset

---

**Model U400:**                      47328545454# select Factory Reset



## Model U8120, U8110, U8210, U8290:

➤ Code: 277634##\*# master reset

(Without SIM card, not showing typed command)

Do not use keypad till message „All settings restored” appear on screen. Check after reset.



---

**Model U8130:**                      Menu, 9, 0, 1, 1  
Enter security code 0000 and press ok  
Menu, 4, 5, 1, 1,  
Enter security code 0000 and press ok

**Model U8330:** 637664#\*#



**Model U8360:**

Master reset: Menu, 3 8, 1, 1  
Enter security code 0000

Erasing phone book: Menu, 8, 7, 5, 1, 1  
Enter security code 0000 and press ok



**LG L600v, KU450**

- Code: 63342425#\*# 8 (without sim)



**LG U880:**

- Code: 142358#\*# 8 (with sim card)

Different solution, if keypad is not working (phone on with sim):

- Master reset: Menu, Settings, Reset settings, Clear memory + Defaut settings, Enter security code 0000
- Erasing phone book: Menu, Contacts, Settings, Clear contacts, Hadset, Enter security code 0000 and press ok



**Model U8138:** 47328545454# select Factory Reset



---

### LG U8138, KT520

- Code: 338464#\*# select Factory Reset



---

### LG U8380:

- Code: 525252#\*# select Factory Reset



---

### LG KU380:

- Code: 3845#\*380# select Factory Reset



---

### LG KU800:

- Code: 26911147#\*# select Factory Reset

